

How to Set Up the Roku with your TV

In order for the Roku to work with your TV you must have a TV with an HDMI port (usually located on the back or the side of your TV). You will also need a high speed Internet connection and have WIFI in your home.

The Roku that you have checked out from the library has the following:

- Roku box



- HDMI cable that connects from your TV to the back of the Roku box



- Power cord for the Roku Box that connects from the back of the Roku box to the power outlet



- Remote control



Set Up the Roku

1. Plug in the power cord to an outlet near your TV.
2. Plug the other end of the power cord (rounded end) into the back of the Roku box.
3. Plug one end of the HDMI cable into the back of the Roku box. Look at the shape of the end to make sure you are inserting the HDMI in the right way.
4. Plug the other end of the HDMI cable into the HDMI port of your TV.
Note the number of the HDMI port you are using on your TV

Once the cords are plugged in you are ready to turn on your TV with the TV remote that came with your television.

1. Turn on your TV with your TV remote.
2. Take your TV remote and look for the INPUT button or SOURCE button.
3. Select INPUT or SOURCE.
4. Look for the number of the HDMI port that you used in the back or side of your TV for the HDMI cable and select that one using your TV remote.

The ROKU Home screen should come up on your TV.

1. Take the ROKU remote and go over to SETTINGS, using the arrows on the remote to highlight SETTINGS. Once SETTINGS is highlighted, press OK.

The arrows on the remote let you move to the different options listed on the screen. You can move the cursor right, left, up or down with the arrows on the remote.

2. Under the SETTINGS menu, look for the word NETWORK.
3. Use the down arrow and select NETWORK.
4. Press OK.
5. Select WIRELESS and OK.
6. Select SET UP NEW WIFI CONNECTION. Press OK.
7. Message “looking for wireless network” should appear on screen.
8. Look for the name of your home network on the list.
9. Use the arrows to highlight your home network name.
10. Press OK.
11. Put in your network password. To do this use the purple arrows to find the letters or numbers in your WIFI network password. If you have a capital letter in your password, press the up arrow symbol before you select the letter. If you make a mistake typing your password, select the x.
12. Once your network password is typed correctly, select CONNECT and OK.

You will get a message “making the connection”.

Accessing the Services on the Roku

Once the connection is made, press the home button on the Roku remote.

You will have access to the following under the **My Channels** option:

Netflix – movies and tv shows
YouTube – Internet videos
Pandora – streaming music
Vevo – music videos
PBS Kids – children’s programs – requires parent’s email address
Facebook – social network

Plus many more (these are not always free)

- **Not all of the selections in this Roku are free. You should never agree to buy or to register for a product.**
- **Do not attempt to add or remove any channels.**
- **Other than your home WiFi network name and password, do not enter any of your personal account information into any of the channels. This data will not be cleared when you return the device.**

To select a Channel, use the arrows on the Roku remote to highlight your selection and Press OK.

1. For instance, to select Netflix, use the arrow to highlight Netflix. You can choose Netflix or Kids Netflix. Highlight one and press OK.
2. Use the down arrow on the remote to see the movies listed by category. Once you have chosen a category, you can browse all titles in that category by using the right and left arrows on the remote.
3. To make a selection, highlight it and press OK.
4. Select Play to view the selection.

If you want to go back to the Home Screen or you are done watching, press the Home button on the remote.

To disconnect the Roku from your TV

1. Use your TV remote and Select SOURCE or INPUT and change the selection from HDMI to the correct setting for TV viewing (usually another HDMI port that your TV HDMI is plugged into.)
2. Disconnect the HDMI cable from the Roku and TV and unplug the power cord from the power outlet and the Roku box.

**The items to be returned to the case are:
HDMI cable, power cord, Roku box, remote and instructions.**

